

CT1200 & PR1200 with Tamper switch Connections

CT1200 - Art. No.: 460110
PR1200ATM - Art. No.: 460111
PR1200EM - Art. No.: 460121

Color	Functions in the Wiegand Controller	Notes
Red	+12 VDC	Supply
Black	0 VDC	Supply
Blue	External green LED	Active GND
Orange	External red LED	Active GND
Green	D0	Wiegand 0
White	D1	Wiegand 1
Brown	Tamper switch	
Yellow	Tamper switch	

For the CT1200 reader (art.no. 460110) the Wiegand communication can be switched between Wiegand 4, 8 or 26. Default is Wiegand 26. To switch the Wiegand communication format press ## within 10 seconds of putting power on. Press the number of the wanted Wiegand communication (eg. 4) and press ## again to finish.